

Shadow Board Vinyl - Application Guide & Fitting Instructions

Shadow Board Vinyl can be applied by either a wet method or dry method. Generally, the easiest form of application is the wet method and is chosen because it allows movement of the vinyl on the application surface allowing easier removal of air bubbles and reduces risk of creasing.

The **WET** method is as follows:

You will need: Spray type bottle filled with a mixture of a few drops of washing up liquid and water, a Squeegee, preferably with a felt edge and a Craft knife.



CLEAN

1. The application surface must be completely clean. You need to remove any dirt, wax or polish that is on the surface. An alcohol based cleaner is ideal.



PEEL

2. Peel off the paper backing from the vinyl sheet.




SPRAY

3. Generously spray the STICKY side of the vinyl AND the application surface with the mixture of water and washing up liquid.



PLACE

4. Place the vinyl into position on the application surface. The water and washing up liquid mixture will allow you time to slide the vinyl into the correct position.

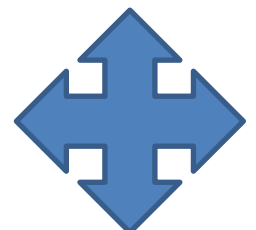

When you are happy with the positioning, hold one end of the vinyl sheet and with the squeegee, slowly 'stroke' the vinyl from the centre outwards. This should push most of the water mix out from under the vinyl. It is better if the non-sticky side of the vinyl is also wetted during this process to help avoid any scratching or marking from the squeegee.



Allow the vinyl to dry for about 24 hours to ensure best bonding.